

AUTOMATIC LAUNDRY

www.automaticlaundry.com

Drying Instructions

1



Clean lint screen and load clothes
Do not dry rubberized materials

2



Insert Card. Your balance will appear.

3



Select cycle temperature and press "Start". Your new balance will appear. **For additional dry time, remove and reinsert card and press "Start".**

To request service, please go to
www.automaticlaundry.com or call us at 800.422.5833