

Washing Instructions

1



Load clothes loosely into washer and close door firmly

2



Add **2 OUNCES OR LESS** of detergent and select cycle type and water temperature

3



Insert Card, your current balance will appear, press "Start" and new balance will be displayed

Drying Instructions

1




Clean lint screen and load clothes
Do not dry rubberized materials

2



Insert Card and your current balance will appear, then choose cycle temperature and press "Start". Your new balance will be displayed


3

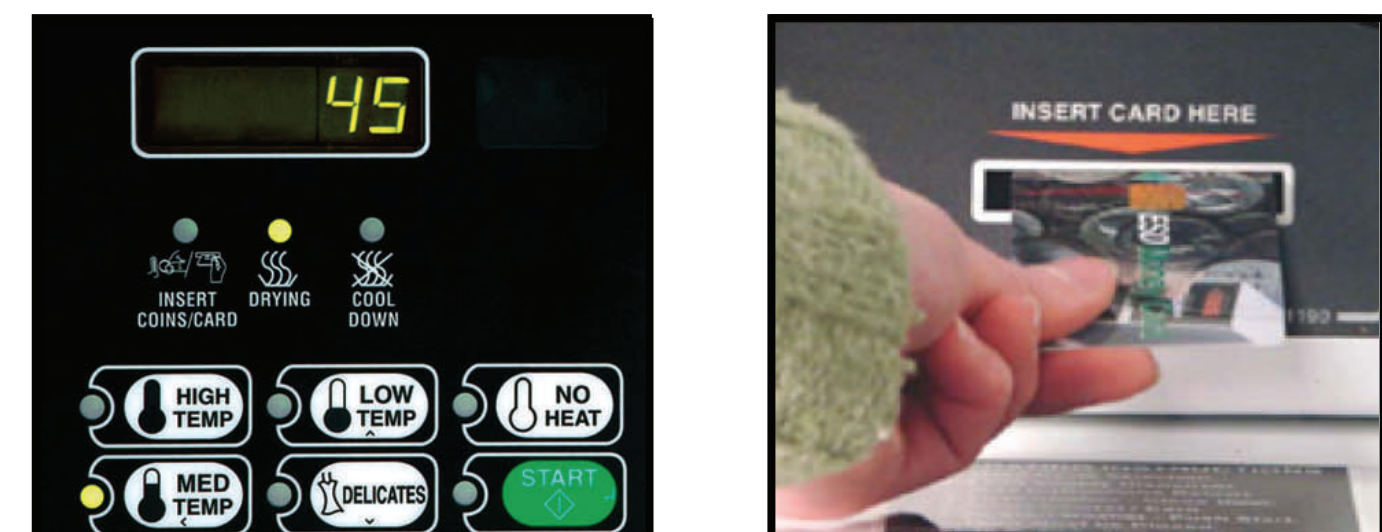

For additional dry time, remove and reinsert card in reader and press "Start"

Important

Use only 1/4 cup (half of recommended amount) of regular detergents to prevent oversudsing.

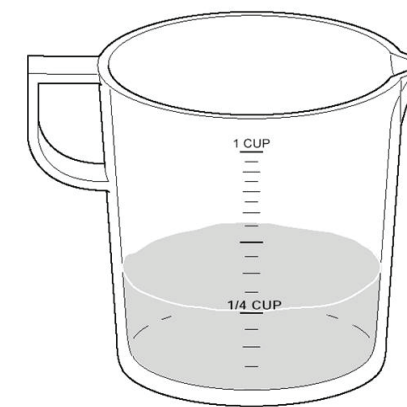

* Special low-sudsing detergents are available for frontload washers.

What To Do If You See:

EC## = Error on Card

Remove card, clean dirt or debris from microchip on card and try again

EFL = Error on Fill

Water is not getting to machine, make sure water is turned on

EDL = Error on Door Lock

Remove obstruction from door and make sure door is closed properly/firmly

EDO = Error on Door

Remove obstruction from door and make sure door is closed properly/firmly

In the unlikely event that the washer door does not unlock one minute after the cycle is complete, simply unplug the washer, leave it unplugged for five minutes, push the door inward and pull on handle